


# 赤外線同時通訳レシーバーの使い方

## How to Use the Simultaneous Interpretation Infrared Receiver

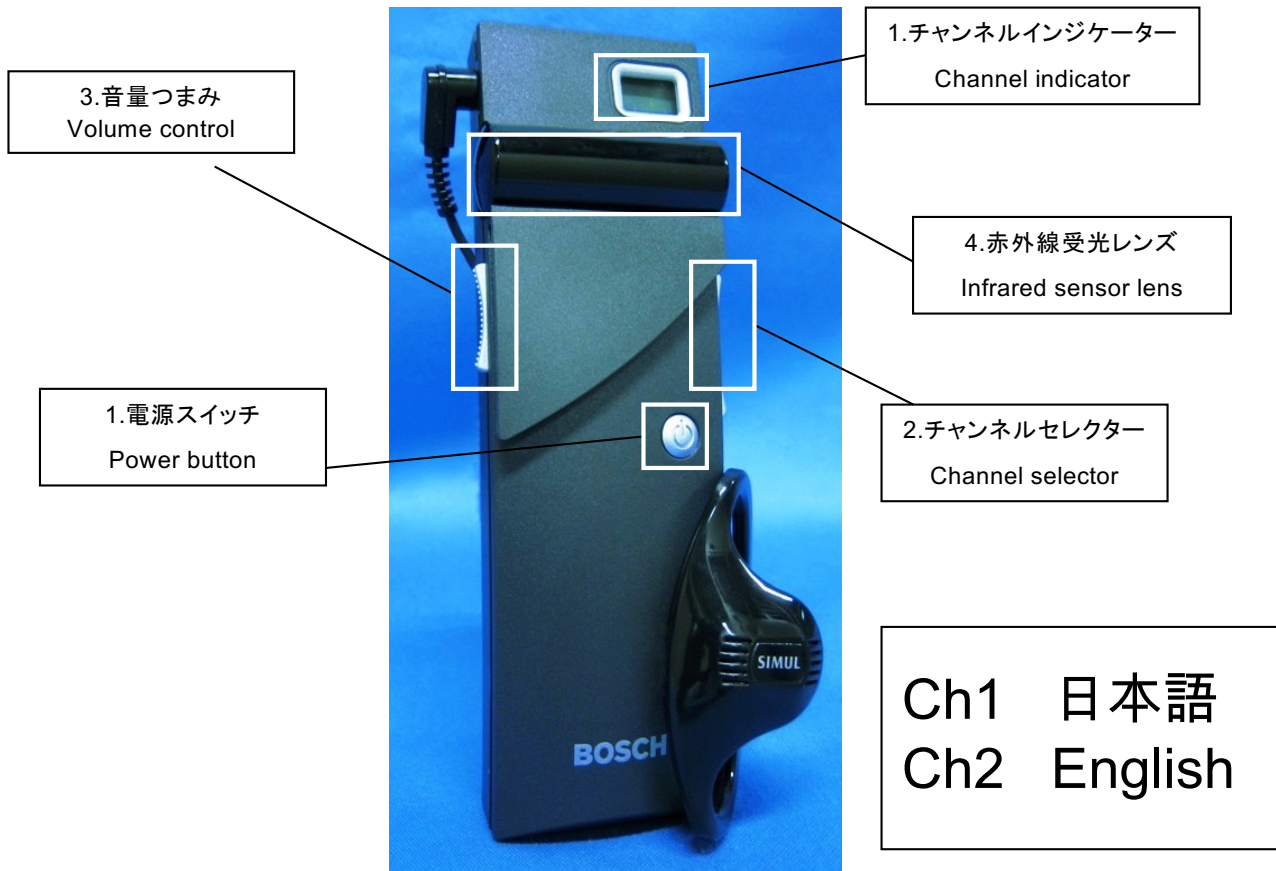

1.電源スイッチを押すと電源が入ります。

Turn a receiver on by pressing the power button. When it is on, the channel indicator lights up.

Note: The receiver will switch off automatically when placed outside of the infrared transmission range or if blocked from receiving transmission for longer than a minute.

2.レバーを押して、聞きたいチャンネルに合わせて下さい。

Slide the channel selector to select your desired language channel.

3.つまみを上下にスライドさせ音量を調整して下さい。

Adjust the volume control as necessary. Moving the dial towards “+” (plus) to increase the volume, and “-” (minus) to decrease the volume.

4.赤外線受光レンズ・・・この部分を紙や手で隠すと音声途切れることがありますので、十分ご注意ください。

Infrared sensor lens ... Please note that blocking the lens with your hand or any other object may cause interruption or deterioration of audio signal reception.

**\*ご使用にならない時は、スイッチをOFFにして下さい。**

**\*Please turn the receiver off when it is not in use.**